

PATTERN · TYPE II VINYL · 9 COLORWAYS

BURMESE

Burmese brings a glamorous animal-print motif to commercial walls — a cultivated classic with an interesting twist. High-fashion colorways and finishes add real wow factor; Winter and Platinum are particularly decorative, with Snow, Sand, Greige, Steel, Komodo, Caribe, and Ingot completing the palette.

Type II 20 oz

100% Vinyl

Osnaburg backing

52/54"

Random Match · Reversible

Class A ASTM E84

BURMESE · Specifications

Fashion animal print · Commercial Type II vinyl wallcovering

PHYSICAL PROPERTIES

WEIGHT	Type II 20 oz
CONTENT	100% Vinyl
BACKING	Osnaburg
WIDTH	52/54"
REPEAT	Random Match, Reversible
ORIGIN	Manufactured in the USA
DECLARATIONS	HPD Compliant · EPD Compliant

PERFORMANCE


- Fire Rating: Class A, ASTM E84
- Europe CE Fire Tested
- CAN/ULC S102 Fire Tested
- Color Fastness UK Test Result: BS2782 — Pass
- Meets Federal Specification CCC-W-408D for scrubbability, washability, and stain resistance
- IMO certification available upon request (flame spread, smoke, and toxicity)

Sustainability

- Low emitting — passes Cal 01350 Standard (LEED EQ 4.2)
- NSF/ANSI 342 certified for responsible manufacturing and sustainable performance
- Product contains up to 40% recycled content
- Free of conflict minerals, heavy metals, solvents, phthalates (BBP, DBP, DEHP, DIDP, DnHP, DnOP), and PFC/PFOA
- Printed with solvent-free inks
- CE Declaration of Conformity
- HPD Compliant and EPD Compliant
- Contributes to LEED credits for commercial and residential projects
- Crafted with low-emitting materials to support healthier indoor air

Colorways at a glance

9 colorways — full-size swatches on the colorways page

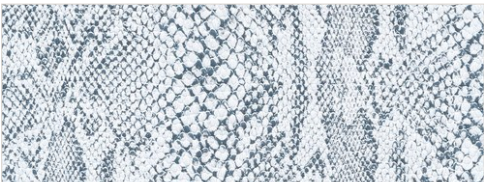

Platinum



Ingot



Snow



Winter



Sand



Greige



Steel



Komodo



Caribe

SPECIFICATION NOTE


All wall surfacing materials, including wallcoverings, should be selected with the building in mind. Buildings with liquid or vapor moisture infiltration — or conditions that make it likely — are at risk for mold growth. Consult a professional about the benefits and limitations of wallcovering in those settings. Textural patterns are designed to simulate natural materials; variation in color, texture, and shading is part of the manufacturing process and adds to the richness of the product.

BURMESE · Colorways


9 colorways · SKUs MC141-2728 through MC141-2736



Platinum
MC141-2728

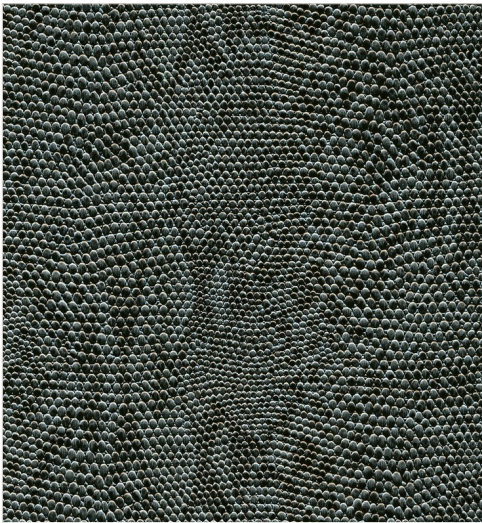

Ingot
MC141-2729

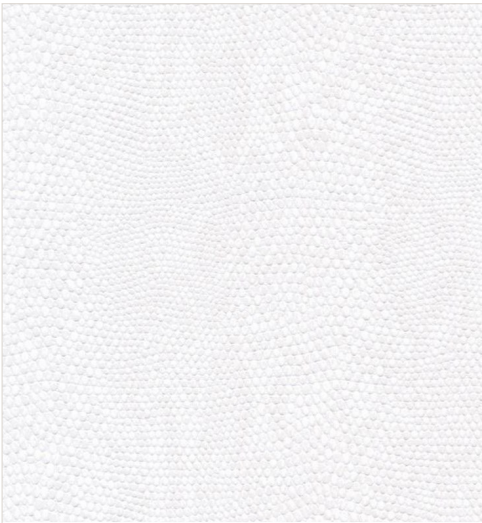


Snow
MC141-2730




Winter
MC141-2731




Sand
MC141-2732

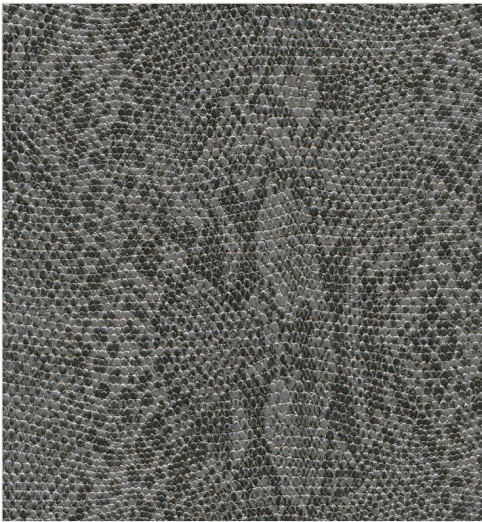


Greige
MC141-2733

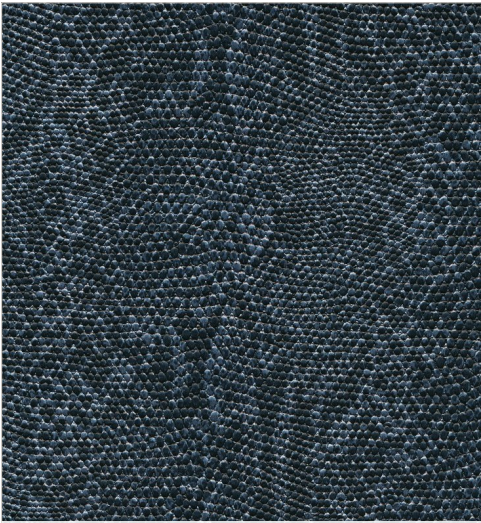

Steel
MC141-2734

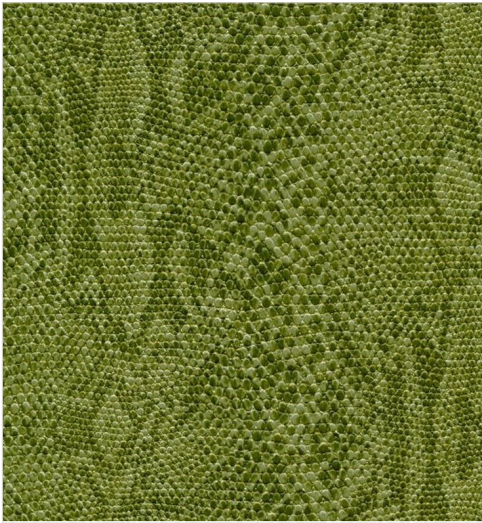

Komodo
MC141-2735

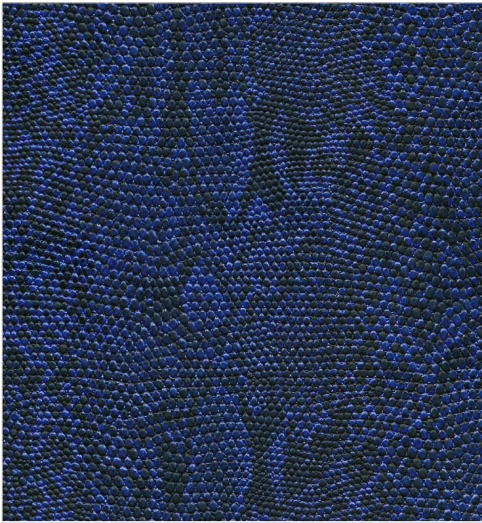

Caribe
MC141-2736

BURMESE · Installation

Read in full before hanging · Deviations may void later claims

STOP AND READ BEFORE INSTALLING

STOP if any discrepancy is discovered during installation and contact Everything Hospitality before proceeding. Examine all material for correct pattern, color, quantity, and matching lot numbers. Install vinyl wallcovering only under permanent lighting. Maintain 60–80°F and 50% relative humidity or less for at least six days before and after installation.

Surface Preparation


- All surfaces must be smooth, clean, dry, and structurally sound. Newly plastered walls should have minimal lime or alkali and less than 4% residual moisture (confirm with a moisture meter).
- Prime new drywall/plaster with a high-quality, adhesion-promoting acrylic or latex wallcovering primer. If moisture is present, apply an oil-based primer first as a barrier, then acrylic or latex over it. Do not hang vinyl directly on oil-based primer.
- Perform an adhesion test to confirm primer and adhesive compatibility. Allow at least 14 days before removing test strips.
- Existing walls: sand glossy surfaces, repair irregularities, and prime. Score a shallow “X” and apply masking tape — if paint peels, it must be removed. Hold a wet sponge 15–20 seconds; if color transfers, remove the paint.
- Completely remove old wallcovering and residual adhesive. Rinse, dry, and prime as above. For surfaces other than drywall/plaster, consult Everything Hospitality for special preparation.

Application


- Install rolls in numerical sequence, starting with roll #1. Number and hang each strip in order.
- For random match patterns, reverse hang every other strip. After three strips, inspect for pattern acceptability. If unsatisfactory, re-hang strip #2 without reversing. Do not continue until approved. Claims beyond three strips will not be accepted.
- Seams may be table trimmed or double-cut on the wall for random match patterns; do not score the drywall. Matched patterns may require table trimming.
- Apply undiluted adhesive to the fabric backing with a pasting machine or short-nap roller. Use a quality pre-mixed adhesive suited to the wallcovering weight. Book per adhesive manufacturer recommendations. Keep adhesive at 65–78°F.
- Hang each strip and smooth with a smoothing brush. Do not skip areas above doors or around windows. Stagger vertical seams at least six inches from corners. Use a heat gun for rounding corners only after testing the finish. Clean excess adhesive from seams immediately.

WARRANTY

Vinyl wallcovering is guaranteed to be free of defects in workmanship and materials for one year. Claims are not honored if these instructions are not followed. Labor and associated costs beyond replacement material are not covered. Represented by Everything Hospitality — Rich Friedman, 732-343-4266, rich@everythinghospitality.com, everythinghospitality.com.

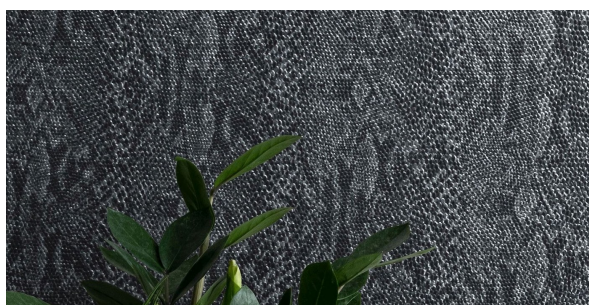


Burmese — installed look

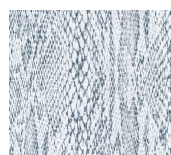

Platinum



Ingot

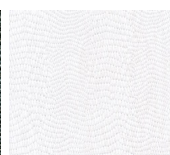


Snow




Winter




Sand

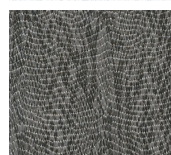


Greige

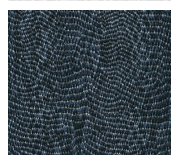


Steel

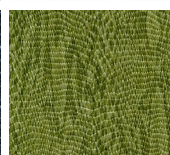

Komodo

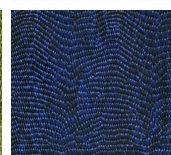

Caribe

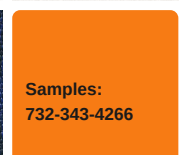

Samples:
732-343-4266